



www.AKCP.com

Speech Action Wizard

This tutorial provides you the information needed to setup a speech action via the notification wizards.

To get to the starting point of this tutorial:


- Log in as administrator
- Click the “Notifications” tab

1. Adding a notification

a) First click on the “notification wizard”

The screenshot shows the AKCP securityProbe web interface in a Microsoft Internet Explorer browser. The address bar shows the URL <http://10.1.1.205/wiznotify.php>. The page title is "System Name - Microsoft Internet Explorer". The browser's menu bar includes File, Edit, View, Favorites, Tools, and Help. The address bar has a search icon, a search box, and a Go button. The page content features the AKCP logo and the text "AKCP securityProbe". A navigation bar at the top includes tabs for Summary, Map, Picture Log, Sensors, Notification, Settings, Applications, and Help. The "Notification" tab is selected and highlighted with a red circle, with a red arrow pointing to it from the text "Click notification tab". Below the navigation bar, there is a "Notification Menu" section with a "Begin Notification Wizard" link circled in red. A red arrow points from this link to the text "Click here to begin setting up a notification". The main content area displays a table of "Action" types and names. The table has two columns: "Action Type" and "Action Name". The "Action Type" column lists SNMP Trap, Email, Alarm Sound, Speech, and Picture Log. The "Action Name" column lists specific actions like SNMP Trap 1 through 6, Email 1 through 3, Alarm Sound 1 and 2, Speech 1 through 3, and Picture Log 1. Below the table are buttons for "Create", "Duplicate", "Edit", "Remove", and "Test Action". The footer of the page contains the copyright notice "©1991 - 2007 AKCP All rights reserved." The Windows taskbar at the bottom shows the Start button and several open applications, including "AKCP Customer Login...", "System Name - Micro...", "security_probe_manu...", "securityprobe_manu...", and "Inbox - Microsoft Out...". The system clock shows the time as 7:15 PM.


b) You will now have the notification wizard page displayed, like below.

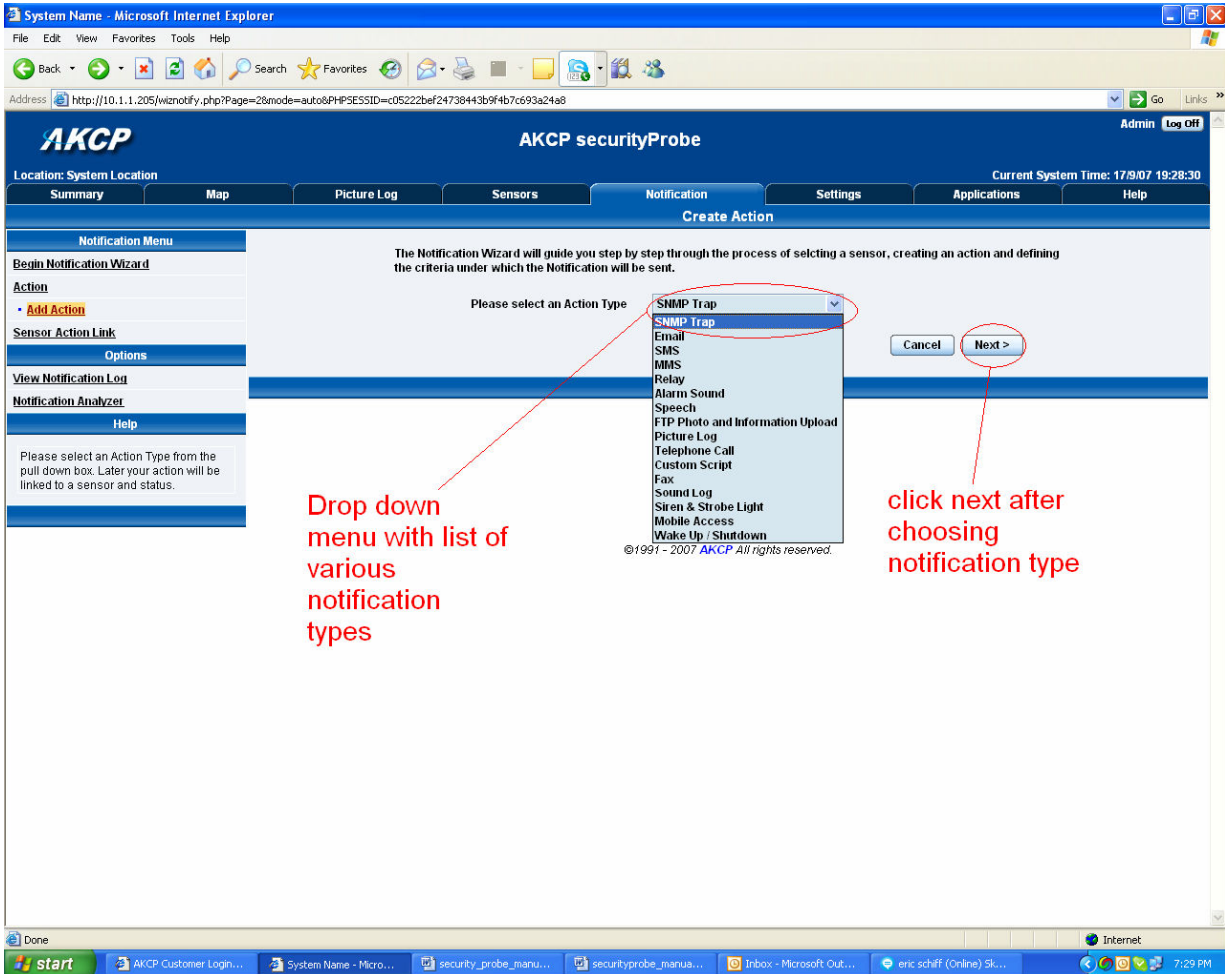

Drop down menu with list of various notification types

click next after choosing notification type

c) Select speech action from the notification type options.

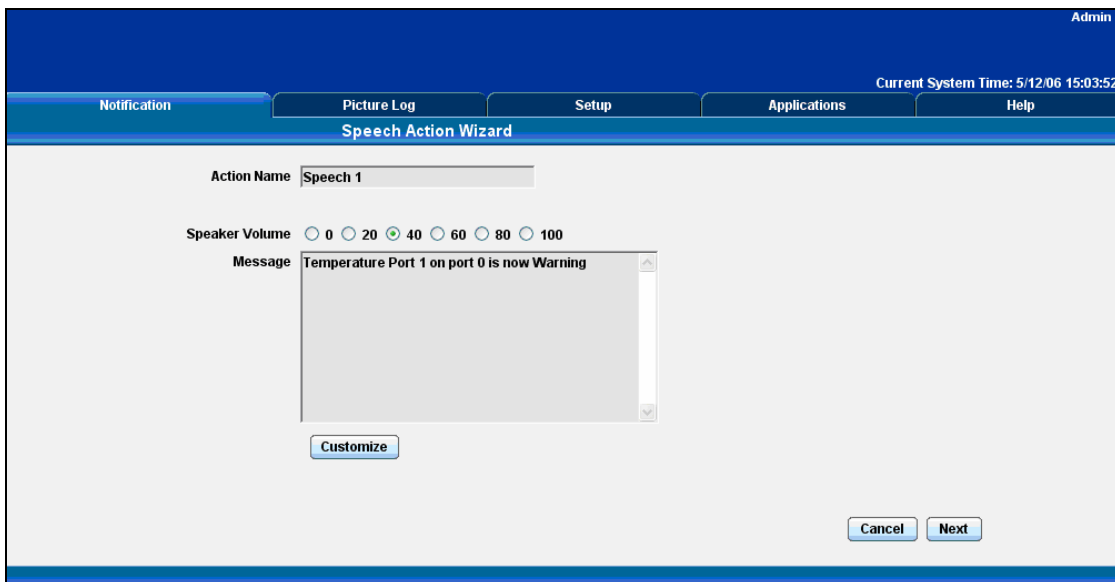

Please choose a name for your **Sound** Action. Descriptive Action names increase the simplicity of the system.

Select the volume at which the Text to Speech module will read the message.

This is a preview of the message that will be said by the Text to Speech module. The message read will include the details relevant to your sensor.


Click **Customize** to edit the macro.

A macro is the piece of text that will return data from the securityProbe. For example \$[TIME] will take the time from the securityProbe and append it to the email.

The **Macro Description** button gives you details of the data the macro displays. At any point during editing of the macro you can click the preview button to see the changes you have made to the message.

Pressing the Test Speech over Speaker button, will cause the Speaker in the securityProbe to say the message aloud.

Click **Next** to continue

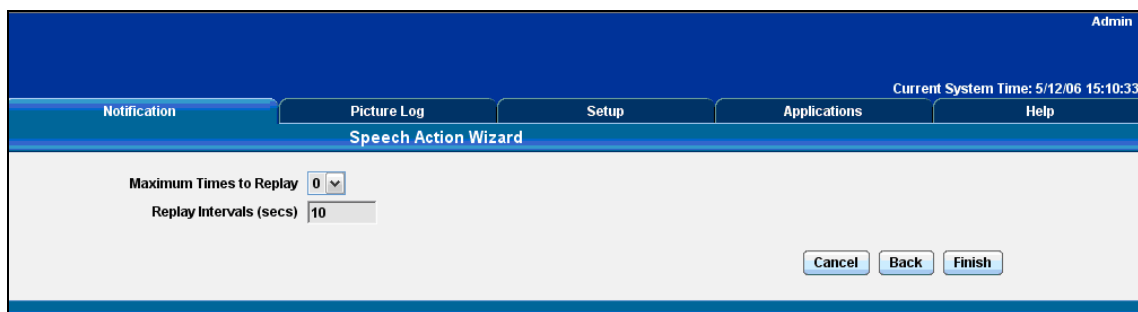

Click **Finish** to Save your Action